

# GROUND ANCHOR INSTRUCTIONS

## Fitting Instructions

1. Place Ground anchor into position.
2. Mark the 4 fixing hole positions onto the floor or wall.
3. Drill 4 holes 14mm diameter in the marked positions.
4. Place the plugs into drilled holes. It is essential that they do not project beyond the surface.
5. Reposition the Ground anchor.
6. Push the 4 bolts through the Ground anchor into the plugs.
7. Holding the Ground anchor firmly in place tighten the screws to the torque required.
8. Insert ball bearing into each bolt head to prevent removal.
9. Your Ground anchor is now ready to use.



### Contents:

- a. Ground Anchor
- b. Fixings (4)

Available from  
[www.bumpstop.co.uk](http://www.bumpstop.co.uk)

# GROUND ANCHOR INSTRUCTIONS

## Fitting Instructions

1. Place Ground anchor into position.
2. Mark the 4 fixing hole positions onto the floor or wall.
3. Drill 4 holes 14mm diameter in the marked positions.
4. Place the plugs into drilled holes. It is essential that they do not project beyond the surface.
5. Reposition the Ground anchor.
6. Push the 4 bolts through the Ground anchor into the plugs.
7. Holding the Ground anchor firmly in place tighten the screws to the torque required.
8. Insert ball bearing into each bolt head to prevent removal.
9. Your Ground anchor is now ready to use.



### Contents:

- a. Ground Anchor
- b. Fixings (4)

Available from  
[www.bumpstop.co.uk](http://www.bumpstop.co.uk)