

HANDLEBAR STRAP INSTRUCTIONS



Ensure the 2 black loops are threaded through the red loops


Note : One black loop will be twisted under the protective sleeve. This is normal.



Now place the strap across the tank



Then place the red loops OVER the handlebar

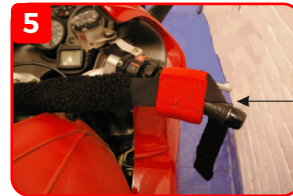

Ensure the black loop is BETWEEN the handlebar and brake lever



Now pull both black loops and tighten the strap on the handlebars

Use the tie down strap with the hook through each black loop and fix to a strong point in the van or trailer. Tighten the tie down straps until the forks are compressed by 20 - 30mm. The tie down straps should pull UP towards you.

The bike is ready to be transported.

Ideal distance between tie down straps on the floor is 500mm each side from wheel.

Available from
www.bumpstop.co.uk

HANDLEBAR STRAP INSTRUCTIONS



Ensure the 2 black loops are threaded through the red loops


Note : One black loop will be twisted under the protective sleeve. This is normal.



Now place the strap across the tank



Then place the red loops OVER the handlebar

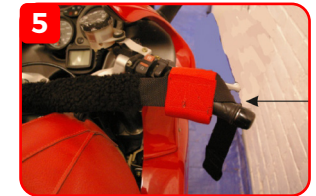

Ensure the black loop is BETWEEN the handlebar and brake lever



Now pull both black loops and tighten the strap on the handlebars

Use the tie down strap with the hook through each black loop and fix to a strong point in the van or trailer. Tighten the tie down straps until the forks are compressed by 20 - 30mm. The tie down straps should pull UP towards you.

The bike is ready to be transported.

Ideal distance between tie down straps on the floor is 500mm each side from wheel.

Available from
www.bumpstop.co.uk